


EchoTouch™ - NATURE FIBER INSULATION™ Installation & Cleaning Instructions

Receiving & Storage: Check Cartons upon receipt & report any damage to shipper & supplier. Always store cartons in a dry area.

Application & Adhesive: Using PSA29 or PGPSA Adhesive, cut the nozzle of the cartridge for a 1/4" bead of adhesive. Apply adhesive from corner to corner on the panel in a X zig-zag pattern, then a perimeter 1/4" bead, 3/4" from edges.

Optional, for a fast instant attachment, apply a 6" circle of spray-on AGS12 Adhesive in each of the quadrants as shown in the diagram. Apply pressure to both the bead adhesive and the sprayed ends and the sprayed areas. The spray-on adhesive will keep the panel in place while the bead of PSA29 or PGPSA Adhesive cures to provide a long lasting permanent bond.

Make sure that the surface to which the panels are being applied to is clean and free from dust in order to ensure a good bonding contact.

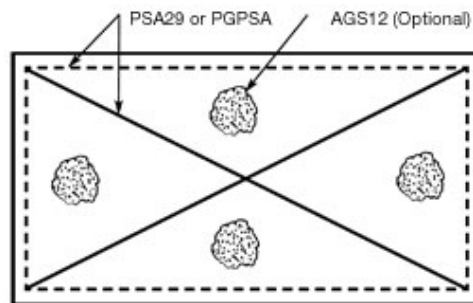

Cleaning & Maintenance: Accumulation of dust and dirt is best removed with a soft brush attachment on a vacuum cleaner. Use vacuum attachment with at least 1" soft brushes to avoid damage to panel. Do not use water or cleaning solutions.

Cutting: For field cutting panels of any size or thickness we recommend that the product be cut on a table saw with a standard 8" round blade with no teeth, (similar to a meat carving blade).

1" material can be cut straight through with one pass. 2" or thicker material should be cut halfway through the thickness of the material, then flipped over and cut again along the same line. This cutting method will deliver the same square edge detail that the product was originally delivered in.