

## **Installation Instructions**


FUZ Felt Direct Attached Wall and Ceiling Line of Panels

## Typical Panel Detail

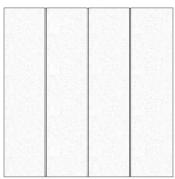


Front of Panel

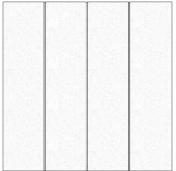


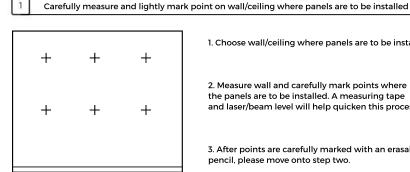

1. Choose wall/ceiling where panels are to be installed



3. After points are carefully marked with an erasable pencil, please move onto step two.

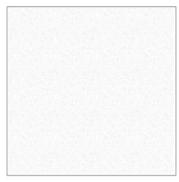

**Back of Panel** 

Identify the front side and the back side of the panels




Wall Elevation Sketch

1. Identify the front of the panel versus the back of the panel. The FUZ Etch design will be located on the front side, and the back side has will be plain with no design/pattern on it.




2. Gather the panels in a sequential order to ease up the process explained in step three. The top most panel in the order should be the first installed, while the last should be the last one installed onto the wall/ceiling.

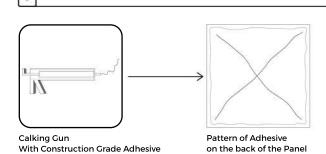

1. With a caulking gun and construction grade adhesive carefully apply beads of glue on the back side of the panel.

2. The pattern on the back of the panel should look similar to the one in the picture in this step. The perimiter should receive a thin bead of adhesive all around, about 1" in from the edge. Once the adhesive is applied to the perimiter, apply an 'X' pattern withing the perimiter bead.



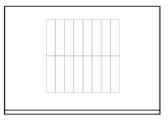

- 1. Apply the panels on the desired/marked spot on the wall/ceiling.
- 2. The edges of the panels shall line up and form a continuous and uniform look.
- 3. Some pressure should be applied to the panels in order for the adhesive to tack onto the surface. A roller may help.
- 4. Once all panels have been installed in their marked spots, erase and clean all markings on the surface.

